

# HOW TO EXPAND FREQUENCY

THIS STEP COULD TO OPEN H112A & H412A frequency limit .

1.TURN OFF THE RADIO POWER .

2.PUSH "F" +"CALL" BUTTON AND HOLDING.

3.USE ANOTHER FINGER TO PUSH THE POWER BUTTON TO POWER ON .

4.THE LCD DISPLAY SHOW "88 88.88" THAN RELEASE "F" & "CALL" BUTTON.

5.THE FREQUENCY LIMIT IS OFF .

# HOW TO FAST TUNE FREQUENCY

THIS STEP COULD TO FAST TO TUNE H112A & H412A at MHZ .

1.PUSH "F" BUTTON AND HOLDING .

2.DIRECT ROTATE THE FREQUENCY KNOB TO TUNE AT MHZ , RELEASE " F" BUTTON TO TUNE THE KHZ .

# HOW TO RESET THE RADIO

THIS STEP COULD TO RESET H112A & H412A .

1.TURN OFF THE RADIO POWER .

2.PUSH "F" +"SQ" BUTTON AND HOLDING.

3.USE ANOTHER FINGER TO PUSH THE POWER BUTTON TO POWER ON .

4.THE LCD DISPLAY SHOW "88 88.88" THAN RELEASE "F" & "SQ" BUTTON.

5.THE RADIO RESET ALREADY.